



Additional Benefits included with all Xotic Series Plans:

ROADSIDE ASSISTANCE

Up to \$100 per occurrence for each of the following;

- Towing Assistance
- Flat Tire Assistance
- Fuel, Oil, Fluid and Water Delivery
- Lock-Out Assistance
- Battery Assistance

TRIP INTERRUPTION

Reimbursement for meals and lodging in the event of a covered mechanical breakdown more than 100 km from home.



OPTIONAL COVERAGES (surcharge applies):

ENHANCED SEALS & GASKETS

Seals and gaskets for all covered components are covered independently or in conjunction with a covered repair (*included in Ultimate*).

AIR BLADDER SUSPENSION

Coverage is provided for all of the manufacturer installed mechanical, electrical and pneumatic components of the air suspension system. Some exclusions apply.

HYDRAULIC SUSPENSION

Provides coverage for all of the manufacturer installed mechanical, electrical and hydraulic components of the hydraulic suspension system. Some exclusions apply.



North American Protection

Xtended Auto covers your vehicle anywhere you go in Canada and the United States.

Coverage That is Simple and Easy to Use

Full coverage with no hidden charges; parts and labour included. Repair costs are paid directly to the repair facility, saving you out-of-pocket expenses and the inconvenience of waiting for reimbursement.

Transferable Coverage

If you sell your vehicle, you can transfer your Xtended Auto coverage to the new owner, increasing the resale value of your vehicle.

Toll-Free Assistance

Should you need assistance with a claim or have questions about your Xtended Auto coverage, call the toll-free number for assistance.

Coverage options available to meet your needs

COVERED COMPONENTS	XO-1	XO-2	ULTIMATE
ENGINE:			
All Internally Lubricated Engine Parts	•	•	•
Air Filter Housing	•	•	•
Camshaft	•	•	•
Camshaft Bearings	•	•	•
Connecting Rod Bearings	•	•	•
Connecting Rods	•	•	•
Crankshaft	•	•	•
Distributor Shaft and Housing	•	•	•
Engine Block and Heads	•	•	•
Harmonic Balancer	•	•	•
Intake and Exhaust Manifold	•	•	•
Intake and Exhaust Valves	•	•	•
Lifters	•	•	•
Main Bearings	•	•	•
Mounts	•	•	•
Oil Pan	•	•	•
Oil Pump and Oil Pump Housing	•	•	•
Piston Rings & Piston Pins	•	•	•
Pistons	•	•	•
Push Rods	•	•	•
Rocker Arm Shafts	•	•	•
Rocker Arms	•	•	•
Tensioners / Guides	•	•	•
Thermostatically Controlled Air Intake	•	•	•
Timing Chain or Belt	•	•	•
Timing Gear Cover	•	•	•
Timing Gears	•	•	•
Valve Covers & Valve Guides	•	•	•
Valve Springs	•	•	•
Valve Train	•	•	•
Water Pump	•	•	•
TRANSMISSION:			
All Internal Parts	•	•	•
Band Apply Servo	•	•	•
Bands	•	•	•
Bearings	•	•	•
Bushings	•	•	•
Centre Support	•	•	•
Check Balls	•	•	•
Clutch Apply Piston	•	•	•
Clutches	•	•	•
Collars and Springs	•	•	•
Counter Shaft	•	•	•
Detent Balls	•	•	•
Drums	•	•	•
Dual-Clutch Assembly	•	•	•
Front Pump	•	•	•
Gears	•	•	•
Governor Assembly	•	•	•
Input and Output Shafts	•	•	•
Internal Sealing Rings	•	•	•
Lever	•	•	•
Mounts	•	•	•
Planetary Gear Set	•	•	•
Pressure Regulator Valve and Bearings	•	•	•
Roller Clutches	•	•	•
Shafts	•	•	•
Shift Forks	•	•	•

COVERED COMPONENTS	XO-1	XO-2	ULTIMATE
TRANSMISSION (cont.):			
Stator and Stator Shaft	•	•	•
Synchronizer Sleeves	•	•	•
Synchronizers	•	•	•
Thrust Washers	•	•	•
Torque Converter	•	•	•
Transmission Pan and Case	•	•	•
Vacuum Modulator	•	•	•
Valve Body	•	•	•
HYBRID / ELECTRIC VEHICLE:			
Battery Sensors	•	•	•
Cooling Duct	•	•	•
Cooling Fan	•	•	•
Drive Battery Pack	•	•	•
Electric Drive Motor	•	•	•
High Voltage Harness and Junction Box	•	•	•
Hybrid Control Unit	•	•	•
Inverter	•	•	•
Stator and Rotor	•	•	•
TURBO / SUPERCHARGER:			
All Internal Parts	•	•	•
Housing	•	•	•
TRANSFER UNIT:			
All Internal Parts	•	•	•
Case	•	•	•
DRIVE AXLE:			
All Internal Parts	•	•	•
Axle Shafts	•	•	•
CV / Tripod Joints	•	•	•
Differential Case	•	•	•
Drive Shaft Carrier	•	•	•
Drive Shaft Yokes	•	•	•
Drive Shafts	•	•	•
Front Hubs	•	•	•
Locking Hubs	•	•	•
Propeller Shafts	•	•	•
U Joints	•	•	•
STEERING:			
All Internal Parts in Rack and Pinion	•	•	•
Power Steering Cooler	•	•	•
Power Steering Pump	•	•	•
Steering Box	•	•	•
ELECTRICAL:			
Alternator	•	•	•
Front and Rear Wiper Motor	•	•	•
Front and Rear Wiper Motor Circuit Board	•	•	•
Starter Assembly	•	•	•
Starter Motor	•	•	•
Starter Relay	•	•	•
Switches for Power Windows	•	•	•
Voltage Regulator	•	•	•
Antenna Motor	•	•	•
Cruise Control Servo	•	•	•
Distributor	•	•	•
Door Lock Actuators	•	•	•
Electronic Digital Instrument Cluster	•	•	•
Electronic Ignition Module	•	•	•
Heater Blower Motor	•	•	•
Module and Transducer	•	•	•

COVERED COMPONENTS	XO-1	XO-2	ULTIMATE
ELECTRICAL (cont.):			
Trunk Actuator	•	•	•
Washer Pump Relay and Delay Switch	•	•	•
BRAKES:			
Accumulator	•	•	•
Anti-Lock Brakes Electronic Control Unit	•	•	•
Calipers	•	•	•
Combination Valve	•	•	•
Hydraulic Pump / Motor Assembly	•	•	•
Isolation Dump Valve	•	•	•
Master Cylinder	•	•	•
Pressure Modulator Valve	•	•	•
Wheel Cylinders	•	•	•
Wheel Speed Sensors / Exciters	•	•	•
Clips and Retainers	•	•	•
Power Assist Booster and Valve	•	•	•
Steel Lines and Fittings	•	•	•
AIR CONDITIONING:			
Compressor	•	•	•
Condenser	•	•	•
Receiver Dryer	•	•	•
Accumulator	•	•	•
Clutch	•	•	•
Evaporator	•	•	•
Expansion Valve	•	•	•
Orifice Tube	•	•	•
COOLING:			
Engine Cooling Fan Motors	•	•	•
Radiator Fan	•	•	•
Water Pump	•	•	•
Radiator	•	•	•
Temperature Sensors	•	•	•
SUSPENSION:			
Coil and Leaf Springs	•	•	•
Control Arm Shafts and Bushings	•	•	•
Spindles and Spindle Supports	•	•	•
Upper and Lower Ball Joints	•	•	•
Upper and Lower Control Arms	•	•	•
ELECTRONICS:			
Calibration Prom	•	•	•
Crankshaft Position Sensor	•	•	•
EFI Sensors	•	•	•
Electronic Engine Control Module	•	•	•
Electronic Spark Control Module	•	•	•
Engine Control Module	•	•	•
Front Rear and Side View Camera	•	•	•
Front Rear and Side View Display Monitor	•	•	•
Idle Air Control Valve	•	•	•
Manifold Air Pressure Sensor	•	•	•
Mass Air Flow Sensor	•	•	•
Oxygen Sensor	•	•	•
Powertrain Control Module	•	•	•
Sensors and Initiators for TPMS	•	•	•
Throttle Position Sensor	•	•	•
Transmission Control Module	•	•	•
FUEL DELIVERY:			
Control Module for TPMS	•	•	•
Fuel Pump	•	•	•
Injection Pump	•	•	•

COVERED COMPONENTS	XO-1	XO-2	ULTIMATE
FUEL DELIVERY (cont.):			
Metal Fuel Lines	•	•	•
Throttle Body Assembly	•	•	•
Vacuum Pump	•	•	•
SEALS AND GASKETS:			
In Conjunction with a Covered Repair	•	•	•
ADDITIONAL COVERAGE:			
Air Door Motors	•	•	•
Anti-Theft Devices	•	•	•
Driver Assist Sensors	•	•	•
Fuel Rail	•	•	•
Heated Seat Elements	•	•	•
Rain Sensing Wiper System	•	•	•
Seat Memory Modules	•	•	•
Seat Recliner	•	•	•
Steering Assist Module	•	•	•
Vehicle Fluid Coolers	•	•	•
Wheel Hub Assembly	•	•	•

And that's not all...

Our Ultimate program offers coverage so comprehensive that if it's not on the short list of Exclusions, it is covered. Ultimate XO coverage includes all components covered under XO-1 and XO-2 coverage PLUS hundreds more.

The full list of Exclusions can be found on our website at www.vprotectcdn.com



The information provided is intended to provide only a brief description of the benefits of the Xtended Auto program. The Xtended Auto program has exclusions and limitations that apply to the benefits discussed. For complete details please see service contract or mechanical breakdown insurance policy terms and conditions. Repair costs are estimates and may vary depending on unit and repair facility.